

报警门户 (Alarm Portal)

报警门户 (AlarmPortal) 工具允许您使用查看工具 (门户) 查看和确认许多来自不同 station 的报警。

图 103 Alarm Console Monitor

Alarm Console Monitor						2 objects
Station	Port	Console Ord	Status	Last Connected Time	Last Disconnected Time	
ip:10.10.8.160	1912	slot:/Services/Alarming/ConsoleRecipient	Connected	17-Nov-04 9:06 AM	null	
ip:10.10.8.209	1911	slot:/Services/AlarmService/ConsoleRecipient	Connected	17-Nov-04 9:07 AM	17-Nov-04 9:07 AM	


Open Alarm Sources						15 objects
Timestamp	Source State	Ack State	Ack Required	Source		
17-Nov-04 8:31:13 AM	Normal	0 Acked / 1 Unacked	true	local: station: slot:/AlarmLab/SimJace_Numeric/OutOfRange		
17-Nov-04 7:21:13 AM	Normal	0 Acked / 1 Unacked	true	local: station: slot:/AlarmLab/SimJace_Numeric/OutOfRange		
17-Nov-04 6:53:13 AM	Normal	0 Acked / 1 Unacked	true	local: station: slot:/AlarmLab/SimJace_Numeric/OutOfRange		
17-Nov-04 1:59:13 AM	Normal	0 Acked / 1 Unacked	true	local: station: slot:/AlarmLab/SimJace_Numeric/OutOfRange		
17-Nov-04 12:59:43 AM	Normal	0 Acked / 1 Unacked	true	local: station: slot:/AlarmLab/SimJace_Numeric/OutOfRange		
16-Nov-04 11:46:13 PM	Normal	0 Acked / 1 Unacked	true	local: station: slot:/AlarmLab/SimJace_Numeric/OutOfRange		
16-Nov-04 9:26:13 PM	Normal	0 Acked / 1 Unacked	true	local: station: slot:/AlarmLab/SimJace_Numeric/OutOfRange		
16-Nov-04 9:08:43 PM	Normal	0 Acked / 1 Unacked	true	local: station: slot:/AlarmLab/SimJace_Numeric/OutOfRange		
16-Nov-04 7:41:13 PM	Normal	0 Acked / 1 Unacked	true	local: station: slot:/AlarmLab/SimJace_Numeric/OutOfRange		
16-Nov-04 7:06:13 PM	Normal	0 Acked / 1 Unacked	true	local: station: slot:/AlarmLab/SimJace_Numeric/OutOfRange		
16-Nov-04 6:52:13 PM	Normal	0 Acked / 1 Unacked	true	local: station: slot:/AlarmLab/SimJace_Numeric/OutOfRange		
16-Nov-04 5:59:43 PM	Normal	0 Acked / 1 Unacked	true	local: station: slot:/AlarmLab/SimJace_Numeric/OutOfRange		
16-Nov-04 4:56:43 PM	Normal	0 Acked / 1 Unacked	true	local: station: slot:/AlarmLab/SimJace_Numeric/OutOfRange		
17-Nov-04 6:25:13 AM	Offnormal	0 Acked / 2 Unacked	true	local: station: slot:/AlarmLab/SimJace_Numeric/OutOfRange		

Buttons: Acknowledge, Hyperlink, Notes, Silence, Filter

报警门户 (alarm portal) 中有两个可以重新调整尺寸的窗格:

- 顶部窗格, **Alarm Console Monitor**, 列出了 station, 以及下部窗格, **OpenAlarm Sources**. 为了添加来自不同 station 的报警控制台 (alarm console), 在 Alarm Console Monitor (顶部窗口) 中右击, 并选择 **Add Alarm Console** 菜单, 就可以启动 **Add Alarm Console** 向导了. 为了查看单个的报警记录和及其所有信息, 选择一个报警, 并双击该报警, 就可以查看 **AlarmRecord** (报警记录). 可用的命令包括:
为了查看报警详情, 双击 **OpenAlarm Sources** 窗口中列出的任何报警.
如果已经启用了 alarm portal 工具, 它会将报警图标放到的任务栏 (system tray) 和报警弹出窗口中.

图 104 报警门户弹出窗口

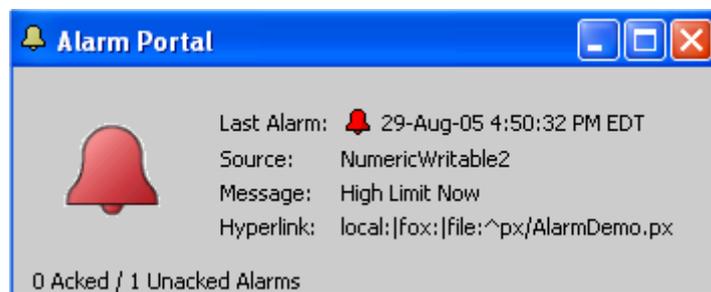

如需设置有关 alarm portal 的选项, 点击 **Tools->Options** 菜单, 如报警门户选项, 第 67 页中所述。